

INSTALLATION INSTRUCTIONS


1. SLIP ESCUTCHEON PLATE & STOP WASHER OVER SHAFT & INSERT SHAFT & STOP PINS INTO HOLES INTO PANEL.
2. SLIP TAB WASHER OVER SHAFT, RUN NUT UP TO PANEL, THEN BACK OFF TO OBTAIN SMOOTH OPERATION & BEND TABS UP AGAINST FLATS OF SQUARE UNITS.
3. THREAD PAWL ON SHAFT TO DESIRED GRIP AND LOCK IN PLACE WITH SCREW.

TABLE I

TYPE "A" OPERATION	
T-BAR	ORIENTATION WITH *T* BAR
PARALLEL	PAWL PERPENDICULAR- STOP WASHER PARALLEL
PERPENDICULAR	PAWL PARALLEL- STOP WASHER PERPENDICULAR

TYPE "B" OPERATION	
T-BAR	ORIENTATION WITH *T* BAR
PARALLEL	PAWL PERPENDICULAR- STOP WASHER PERPENDICULAR
PERPENDICULAR	PAWL PARALLEL- STOP WASHER PARALLEL

* RELATIONSHIP WITH EDGE OF OUTER PANEL.

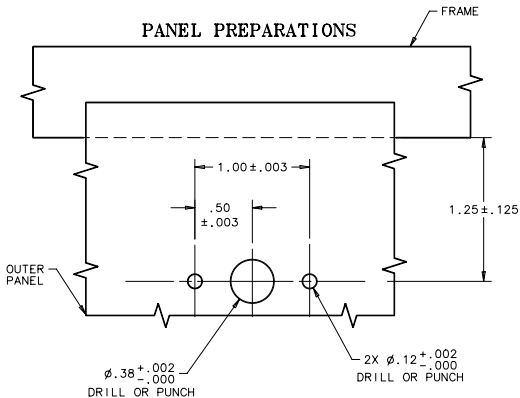

NOTE: THE DETERMINATION OF HAND & OPERATION OF THIS FASTENER IS DEPENDENT ON THE ORIENTATION OF THE STOP WASHER WITH RESPECT TO THE *T* BAR HANDLE. FOR PROPER ORIENTATION SEE TABLE I.

Southco

PROPRIETARY ITEM - EXCEPT FOR USES EXPRESSLY GRANTED IN WRITING INFORMATION DISCLOSED HEREON IS CONFIDENTIAL AND ALL RIGHTS PATENT AND OTHERWISE ARE RESERVED BY SOUTHCO, INC.

NO.68 PAWL FASTENER-ASSEMBLY

DATE 12-28-64 DRAWN CHKD SCALE

DRAWING NUMBER J-68-10-101-20

REV	DATE	DRAWN/CHKD	DESCRIPTION	PART NUMBER	MATERIAL	FINISH					
W	1-4-91	JRP/	PRN: 68-70	68-10-101-10	SEE NOTE B	SEE NOTE B					
X	22JAN1993	JGK/	PRN: 68-79								
Y	5MART1993	JTB/	S-1-03								
Z	11APR2005	BRP/RLR	PRN: P2005-0594								

INCHES

ALL DIMENSIONS WITHOUT TOLERANCES ARE FOR REFERENCE ONLY.



NOTES:

- A. FASTENER SHIPPED UNASSEMBLED. PACKAGED ONE UNIT PER BAG.
- B. PIN: STAINLESS STEEL, NATURAL. SHAFT, SCREW, HEX NUT, TAB WASHER, AND STOP WASHER: STEEL, ZINC FLAKE COATING. FERRULE & ESCUTCHEON PLATE: DIE CAST ZINC, BRIGHT CHROME PLATE.
T-BAR: STEEL, BRIGHT CHROME PLATE.
PAWL: DIE CAST ZINC, ZINC FLAKE COATING.

