


REVISION HISTORY]
DATE BY DESCRIPTION]
2JUN2023DPZ/CMSPRN:P2023-1257TING HARDWARE SUPPLIED.ENING TORQUE FOR MOUNTING SCREWS 0.5 Nm.STALLATION TORQUE 4 Nm MIN.IV DRIVER WHEN INSTALLING MOUNTING SCREWS.	D
OPTION 2 FOR INSTALLATION OF ROTATION LIMITER - VIEWED FROM BACK-	
RIGHT HAND MOUNTING TO OPEN: TURN HANDLE 90° EWED CLOCKWISE IF VIEWED FROM FRONT	С
TALLATION OF BOTTOM MOUNTING BRACKET	
LOCK/ UNLOCK	7 B
RIGHT HAND MOUNT WHEN H3-61-56-33 MULTI POINT SYSTEM IS USED. SOUCHCO®	
CONNECT · CREATE · INNOVATE RIPTION -EM ELECTRONIC SWINGHANDLE WITH RFID READER TH WIEGAND DATA OUTPUT, ICLASS UID E SYSTEM 3 NX J-H3-EM-66-100 HBY NAM/WB DATE 09SEP2014 SCALE 1:1 SHEET 2 OF 4 1	A

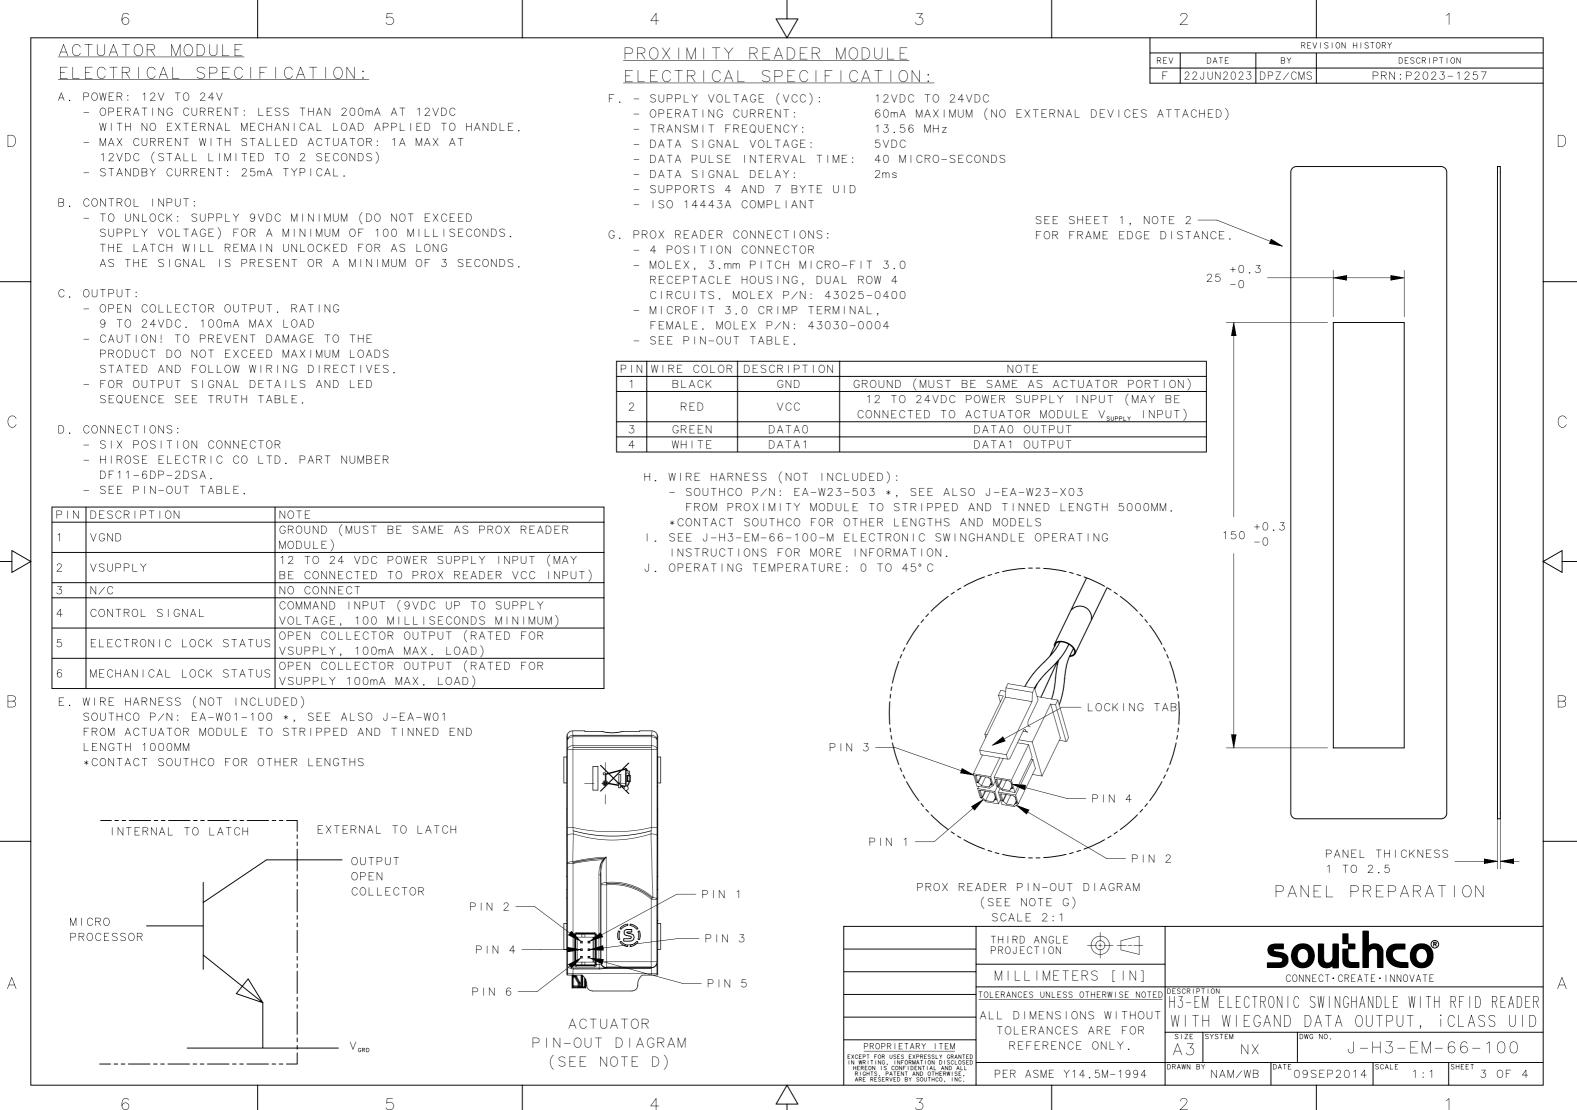

С

2

|--|

								REVIS	ION HISTORY
							REV DATE	BY	DESCRIPTION
							F 22JUN2023 D	PZ/CMS	PRN:P2023-1257
	ATCH STATUS DEF								
	AICH STATUS DET					1			
L	ATCH STATUS	LATCH LED	PIN 6 OUTPUT	PIN 5 OUTPUT	PIN 4	NOTE			
		<u> </u>	HANDLE LOCK		CONTROL INPUT				
SF	ECURED	BLUE	OPEN COLLECTOR	OPEN COLLECTOR	GND	ENCLOSURE SECURED- ACCESS DENIED			
E	LECTRONICALLY RELEASED	BLUE / MAGENTA FLASHING	OPEN COLLECTOR	LOW	V ⁺ ss	ENCLOSURE READY FOR ACCESS			
			LOW	LOW	V ⁺ _{SS}	ACCESS GAINED - HANDLE LIFTED OR MECH	ANICALLY UNLOCH	KED	
IVI t	ECHANICALLY RELEASED	BLUE FLASHING LOW	LOW	OPEN COLLECTOR	GND	ACCESS GAINED - HANDLE LIFTED - ELECT	RONIC LOCK CLOS	SED	
	ANDLE NOT FULLY OLOGED		OPEN COLLECTOR	LOW	GND				
	ANDLE NOT FULLY CLOSED	BLUE / RED FLASHING	LOW	LOW	GND	INTERIM STATES ONLY DURING CLOSING OF	HANDLE		

ELECTRONIC SWINGHANDLE MATERIALS

\sim	H3-EM-66-LLL			
C	COMPONENT	MATERIAL	FINISH	NOTE
	CIRCUT BOARD	DETAILS ON REQUEST	DETAILS ON REQUEST	
	MOTOR	DETAILS ON REQUEST	DETAILS ON REQUEST	
	GEAR SHAFT	STAINLESS STEEL	NATURAL	
	WORM GEAR	PA66 1300S	NATURAL	
	PINION GEAR	POM M90-44	BLACK	
	SPUR GEAR	POM M90-44	BLACK	
	GEAR RETAINER	PC (LEXAN VO)	CLEAR	
	MOTOR COVER	PC ABS (UL94- VO)	BLACK	
\rightarrow	LATCH BODY	30% GF NYLON (UL94- VO)	BLACK (A&B SURFACES VD136)	
	HANDLE MOULDING	30% GF NYLON (UL94- VO)	BLACK (A&B SURFACES VD136)	
	LIGHT PIPE	PC (LEXAN VO)	CLEAR	
	BOTTOM MOUNTING BRACKET		BLACK	
	SLIDE	30% GF NYLON (UL94- VO)	WHITE	
	HANDLE SHAFT	DIE CAST ZINC	ZINC PLATE BRIGHT CHROMATE	
	ROTATION LIMITER	DIE CAST ZINC	ZINC PLATE BRIGHT CHROMATE	2 SIZE OPTIONS SUPPLIED
	TOP MOUNTING BRACKET		BLACK	
	MOUNTING SCREW 25 LONG	STEEL	ZINC PLATE + BRIGHT CHROMATE	INSTALL WITH #1 POZIDRIV DRIVER
В	MOUNTING SCREW 14 LONG	STEEL	ZINC PLATE + BRIGHT CHROMATE	INSTALL WITH #1 POZIDRIV DRIVER
	OUTPUT GEAR MOULDING	POM M90-44	BLACK	
	REFLECTOR	POM M90-44	OPAQUE WHITE	
	CONNECTING LEAD	DETAILS ON REQUEST	DETAILS ON REQUEST	ORDER SEPERATELY
	DIN LOCKPLUG	DETAILS ON REQUEST	DETAILS ON REQUEST	OPTIONAL WITHOUT LOCKPLUG
	LOCK PLUG RETAINING SCREW	STEEL	ZINC PLATE + BRIGHT CHROMATE + SEALER	
	SHAFT PIN	SAE 30302/30304	PLAIN, OILED	
	O-RING	BLACK NBR RUBBER	GREASED	
	PAWL SCREW	STEEL	ZINC PLATE + BRIGHT CHROMATE	
	PAWL	STEEL	ZINC PLATE + BRIGHT CHROMATE	ORDER SEPERATELY
	PROXIMITY READER MODULE	DETAILS ON REQUEST	DETAILS ON REQUEST	
	BLANK PLUG	DIE CAST ZINC	CHROME PLATE	OPTIONAL
	SLIDE SPRING	302 STAINLESS STEEL	NATURAL	

THIRD ANGLE PROJECTION $\bigoplus \bigcirc \bigcirc$ MILLIMETERS [IN] TOLERANCES UNLESS OTHERWISE NOTED DESCRI ALL DIMENSIONS WITHOUT WI size A 3 TOLERANCES ARE FOR PROPRIETARY ITEM EXCEPT FOR USES EXPRESSLY GRANTE IN WRITING, INFORMATION DISCLOSE HEREON IS COMFIDENTIAL AND ALL RIGHTS, PATENT AND OHTHERWISE, ARE RESERVED BY SOUTHCO, INC. REFERENCE ONLY. RAWN PER ASME Y14.5M-1994 3 2

А

6

5

Ą



CONNECT·CREATE·INNOVATE	А
-EM ELECTRONIC SWINGHANDLE WITH RFID READER TH WIEGAND DATA OUTPUT, iCLASS UID	, ,
е system 3 NX J-H3-EM-66-100	
N BY NAM/WB DATE 09SEP2014 SCALE 1:1 SHEET 4 OF 4	

1

1

С

 \land


В



Package Contents

- H3-EM-66-x00 Electronic Swinghandle with RFID Reader (qty1)
- EM-0-45827 M3x25 POZIDRIV[®] Mounting Screws (qty 4)
- EM-0-47151 M3x14 POZIDRIV® Mounting Screw (qty 1)
- EM-0-45825 Rotation Limiter (qty 1)
- EM-0-58124 Rotation Limiter (qty1)
- E5-C-04 Pawl Screw (qty 1)
- M3-0-24943-11 Lock Plug Screw (qty 1) (optional)
- EM-0-45826 Top Mounting Bracket (qty 1)
- EM-0-45822 Bottom Mounting Bracket (qty 1)
- Operating Instructions (qty 1)

H3-EM-66-x00 Electronic Swinghandle with RFID Reader

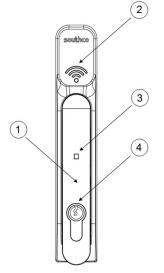

- 1. Handle
- 2. **RFID Reader**
- Tri-Color Status LED 3.
- 4. Lock Plug (optional)

Features

- Installed 13.56MHz RFID reader module with Wiegand data output
- Compatible with 13.56Mhz RFID cards with 4, 7, or 8byte Unique Identifiers (UID)
- Remote lock and unlock capability
- Single or multi-point lock actuation
- Momentary or continuous lock actuation
- Tri-color LED (blue/magenta/red) to indicate lock and handle status
- DIN lock manual override
- Accommodates both left and right doors
- For indoor use only

MARNING: The H3-EM-66-000 is shipped without a lockplug. This product must be paired with a Southco-approved lock to function properly. Use with an unapproved lockplug voids the product warranty. Contact Southco for additional support.

Specifications

H3-EM-66-100 Electronic Swinghandle **Operating Instructions**

Actuator Module

Supply Voltage (V _{SUPPLY}):	12VDC to 24VDC (NOTE : Status LED will blink red if the supply voltage is out of range.)
Standby Current:	50mA maximum at 12VDC
Operating Current:	200mA maximum at 12VDC (with no external mechanical load applied to handle
Stall Current:	1A maximum (at 12VDC, limited to 2 seconds)
Operating Transit Time:	1 second maximum (NOTE : Power must be present during transit times. If power is removed while the lock slide is in transit, it will complete it's cycle when power is restored.)
Electronic Unlock Time:	3 seconds minimum
Open Collector Outputs:	Rated for V_{SUPPLY} , 100mA maximum load

RFID Reader Module

Supply Voltage (Vcc):	12VDC to 24VDC
Operating Current:	60mA maximum (no external devices
	attached)
Transmit Frequency:	13.56MHz
DATA Signal Voltage:	5VDC
DATA Pulse Interval Time	e:40µs
DATA Signal Delay:	2ms
Output Format:	Reverse Byte Order with Upper and Lower Parity Bits

Mounting and Installation


Please refer to Southco trade drawing J-H3-EM-66-100 for mounting and installation details.

MOTE: Use a #1 POZIDRIV[®] driver when installing the mounting screws. See Southco trade drawing J-H3-EM-66-100 for additional details.

Wiring Diagrams

The H3-EM-66-x00 contains two separate functional modules: the actuator module and RFID reader module. The actuator module controls and monitors the locking function of the swinghandle. The RFID module reads the contents of a compatible RFID card and converts it to Wiegand format.


These two modules operate independently of each other and require connection to an access control unit (not provided), as illustrated below, for the entire product to be fully functional.

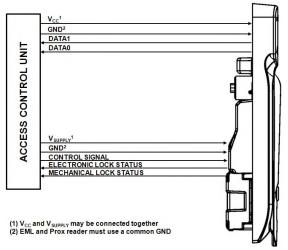




H3-EM-66-100 Electronic Swinghandle Operating Instructions

The actuator module of the swinghandle is accessed with a six-position connector on the rear of the unit, shown below.

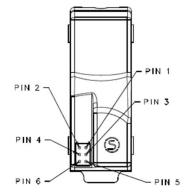

Pin	Description	Note
1	V _{GND}	ground (must be same as RFID reader module)
2	V _{SUPPLY}	12 to 24 VDC power supply input (may be
		connected to RFID reader V _{cc} input)
3	N/C	no connect
4	Control Signal	command input (9VDC up to supply
		voltage, 100 milliseconds minimum)
5	Electronic Lock	open collector output (rated for V _{SUPPLY} ,
	Status	100mA max. load)
6	Mechanical Lock	open collector output (rated for V _{SUPPLY} ,
	Status	100mA max. load)

The RFID reader module of the swinghandle is accessed with a fourposition connector attached to a harness connected to the module's circuit board. The module's connector pinout is:

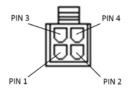

Pin	Wire Color	Description	Note	
1	Black	GND	ground (must be same as	
			actuator module)	
2	Red	VCC	12 to 24VDC power supply input	
			(may be connected to EML	
			V _{SUPPLY} input)	
3	Green	DATA0	DATA0 output	
4	White	DATA1	DATA1 output	

▲ NOTE: The mating connectors/harnesses are not provided with the H3-EM-66-x00. Refer to Southco trade drawing J-H3-EM-66-100 for mating connector/harness requirements.

Wiegand Data Output

The RFID module will read the 4, 7, or 8 byte UID from a compatible RFID card, and convert to Wiegand data format in reverse byte order, including upper even parity (Pe) and lower odd parity (Po) bits, as shown below.

	4B UID) ÷	UID3	UID2	UID1	UID0			
	Output	t→Pe	UID0	UID1	UID2	UID3	Po		
7B UID →	UID6	UID5	UID4	UID3	UID2	UID1	UID0		
Output → Pe	UIDO	UID1	UID2	UID3	UID4	UID5	UID6	Po	
B UID →	UID7	UID6	UID5	UID4	UID3	UID2	UID1	UID0	
Output → Pe	UID0	UID1	UID2	UID3	UID4	UID5	UID6	UID7	P

Control Input Signal

This signal is used to control the electronic lock slide position.

- for UNLOCKED position: Supply 9VDC minimum (do not exceed supply voltage) for at least 100 milliseconds. The lock will remain unlocked for as long as the signal is present, or a minimum of 3 seconds. Signal timing can typically be adjusted at the access control device. The control signal current draw is less than 10mA.
- for LOCKED position: Supply an open contact or 0VDC (0 to 0.5V)

Electronic Lock Status Output and Mechanical Lock Status Output Signals

Electronic Lock Status Output Signal

This output will be LOW (GND) when the lock slide is electromechanically moved to the unlocked position. It will be in the open collector state (high-impedance) when in the locked position.

Mechanical Lock Status Output Signal

This output will be LOW (GND) when the handle is in the open position or when the keylock in the actuator is manually unlocked. It will be in the open collector state (high-impedance) when in the secured position.

▲ **NOTE:** These outputs are open collector outputs rated for V_{SUPPLY} with a maximum load of 100mA. To avoid damage to the H3-EM, do not exceed voltage and current ratings.



H3-EM-66-100 Electronic Swinghandle Operating Instructions

Status LED and Output Signals


The latch is equipped with a tri-color (blue/magenta/red) LED visible from the front of the latch. This LED provides a visible notification of the latch status. The different latch states are described below. Please refer to the **Control Input Signal, Electronic Lock Status Output Signal**, and **Mechanical Lock Status Output Signal** sections for further details on these signals.

Secured

The latch is securely closed, prohibiting access.

- The Status LED will be solid blue.
- The electronic lock status output is at its open collector state.
- The mechanical lock status output is at its open collector state.



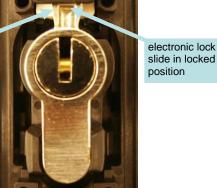

"Secured" State

Electronically Released

The electronic lock slide is in the unlocked position and the handle can be pulled open.

- The Status LED will alternate flashing blue/magenta.
- The electronic lock status output is 0V while the lock slide is in the unlocked position.
- The mechanical lock status output is at its open collector state.

electronic

unlocked

position

lock slide in

handle secured in housing, cam in locked position




"Electronically Released" State

Mechanically Released

The latch is released by opening the handle or moving the cam from its lock position.

- The Status LED will flash blue.
- The electronic lock status output will be at its open collector state if the electronic lock slide is in the locked position. It will be 0V if the lock slide is in the unlocked position.
- The mechanical lock status output is 0V.

NOTE: The lock sensor is an optical device that senses the presence of the lock pawl. Reflectivity of the lock pawl material can affect sensing. Use only Southco-supplied locks.

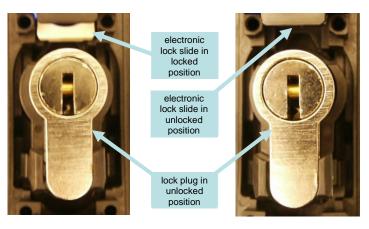


"Mechanically Released" State

Handle not Fully Closed

This is an interim state and may occur while closing the handle when the cam is not secured by the electronic lock slide. The latch is not fully secured during this state.

- The Status LED will alternate flashing blue/red if the cam is not detected. It will flash blue/red/red if the cam is detected, but the lock plate is not in the right position. This could be due to mechanical failure or tampering.
- The electronic lock status output is 0V if the lock slide is in the unlocked position. It will be at its open collector state if it is in the lock position.
- The mechanical lock status output is 0V if the cam is not detected. It will be at its open collector state if it is detected.

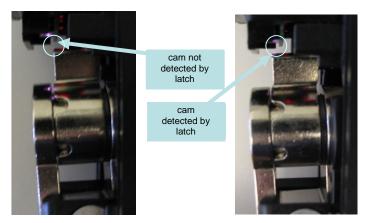

"Handle not Fully Closed" State



H3-EM-66-100 Electronic Swinghandle Operating Instructions

Electronic Lock Slide Error


The electronic lock slide does not respond to the command input signal.

- The Status LED will flash magenta if the latch is secured. It will alternate flashing red/magenta if the latch is mechanically released.
- The electronic lock status output is at its open collector state.
- The mechanical lock status output will be at its open collector state if the cam is in its lock position. It will be 0V if the mechanical key is moved from its lock position.

Error Input Command Sequence

The H3-EM can accept an input command from an external controller to flash the status LED red three times. This feature can be used to indicate that an error event has occurred (e.g. unauthorized access attempt).

The control input signal needs to meet the timing requirements shown below to flash the status LED red.

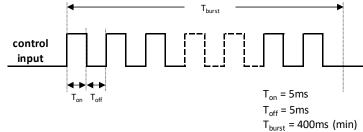

POZIDRIV® is a registered trademark of the Phillips Screw Company

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

Industry Canada Compliance Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1) this device may not cause interference, and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- 1) l'appareil ne doit pas produire de brouillage, et
- 2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.